

**ENGINE OIL STOP LEAK
ÖLVERLUSTSTOP**

Engine oil sealant to stop oil leakages
Seal additive to add to engine oil circuit
For closed loop oil circuit

UTILIZZO

Trattamento per perdite olio motore
Additivo da aggiungere all'olio
Per circuiti olio a ciclo chiuso

PRESTAZIONI

MOTUL ENGINE OIL STOP LEAK, added to engine oil circuit, allows to:
Seal critical small leaks, seepages and leakages
Stop loss of engine oil caused by leakage

RECOMMENDATIONS

One dose of 300 ml is sufficient to treat 5 L of engine oil.
Add MOTUL ENGINE OIL STOP LEAK to the engine oil.
For larger volumes add 50 ml of MOTUL ENGINE OIL STOP LEAK per additional liter of engine oil.
Works during operation.
Attention: Check engine oil level before application!
Do not exceed the recommended proportion.