



RADIATOR STOP LEAK

Radiator sealant to stop cooling leakages
Seal additive to add to cooling systems
For all liquid cooled cooling systems

TYPE OF USE

MOTUL Radiator Stop Leak is for use in all water cooled, closed cooling systems (commercial vehicles, passenger cars, industrial heat exchangers). Reliably seals critical hairline cracks and small leaks – quick and easy.

PERFORMANCE

The major part of the chemical energy that is bound in the fuel is converted into heat during the combustion process which must be dissipated.

Therefore, a fully functional cooling system is of major importance for the operational liability of engines.

Helps to avoid expensive repair works. Prevents from loss of cooling liquid and protects against engine damage.

RECOMMENDATIONS

- 1) Check the coolant level.
- 2) Add the product to the warm cooling system. Move all heater controls to “hot”.
- 3) Let the engine idle for approx. 10 minutes.
- 4) Check the coolant level again and test if the sealing was successful.

Attention: Open radiator filling port slowly and successively – risk of burning! Do not overdose!

Sufficient for cooling systems up to 12 L capacity.

SECURITY

Refer to the MSDS sheet and the information mentioned on the product label.